

# Camcorder/Digital Camera Li-Ion Battery Multicharger & replaceable battery pack



## Description:

### BATTERY MULTI CHARGER:

Power Input: DC 12-24 V  
Power Output: DC 8.4 V  
Charging current: 600 mA (MAX)

With **replaceable plate** for all models of Sony, JVC, Panasonic, etc.

With main charger and car charger:

### AC power supply:

Power Input: AC 100-240 V  
Power Output: DC 12.0 V, 1 A, 12 W

### Car charger adaptor:

Power Input: DC 12-24 V  
Power Output: DC 4.2-12 V

Dimensions: 106.5 x 69 x 37 mm

## Instructions:

- Plug the AC power adapter in a wall outlet.
- Connect the AC power adapter supplied with your charger to the DC in-jack.
- "STATUS" LED indicator shows RED when the charger is ready and "CHARGE" LED indicator shows flashing GREEN when waiting for battery pack.
- Slide battery pack into the Charger and "CHARGE" LED indicator turns RED when charging.
- "CHARGE" indicator flashes RED and GREEN alternately when battery pack has been charged to over 90%.
- When the battery pack is fully charged, the "CHARGE" LED indicator turns steady green.
- After the battery pack fully charged slide the battery pack out.
- Unplug power, "CHARGE" and "STATUS" indicator go out.

## Maintenance:

- Charge at room temperature
- Store in cool and dry place
- Clean up the terminals with a soft cloth if soiled
- Unplug AC power adapter when not in use

## Caution & Warning:

Do not expose the product to fire, water or moisture  
Do not use AC power adapter other than specified by manufacturer.

## Notes:

While charging the battery pack, "STATUS" and "CHARGE" LED indicators will not light if the AC power adapter is not connected properly.

